

LOWER CABINETS MA


The Merianto Medical hospital furniture series is based on the ISO module system, using 600×400 mm and 400×300 mm baskets. The dimensions of the cabinets correspond to the dimensions of the modular system. The lower cabinets are designed for baskets that have a width of 600 mm or 400 mm. It is possible to assemble the contents of the cabinets as desired, using the baskets and shelves of the ISO modular system.

The medicine cabinets are produced from quality melamine and the materials also include an antibacterial surface finish. The cabinets can be assembled with an open or closed facade. The doors open to 220°, and the drawers open 100%.

The selection of facades includes:



Standard options include five different finishing's:

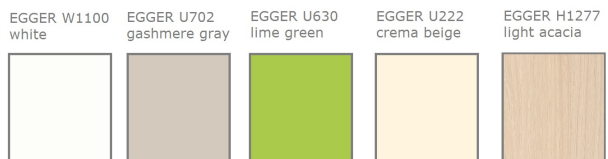

It is also possible to select from a wider variety of different colours and finishes from the catalogues of melamine producers. (The availability of which must be verified at the time of ordering).

The standard solution of the medicine cabinet includes:

- The possibility of custom assembling the contents of the cabinets according to the needs, and using the baskets, shelves and drawers of the ISO modular system.
- Baskets that can withstand a load of up to 20 kg.
- Drawers on ball runners that can withstand loads of up to 50 kg, with bus systems that are soft closing.
- Facade types that are lockable. The locks can be organised into series, as desired, so that they are compatible with other cabinets in the same room, floor or zone. The base selection includes a mechanical furniture lock, but an electronic code-lock, or chip-card lock, can also be selected.
- Doors with silicone magnets that ensure secure and soft closing.
- The option of integrating sensor-controlled LED lighting into all cabinets.
- Handles that are 128 mm long and have an antibacterial surface finish.
- The option of installing cabinets using: a closed base, open metal frame or merely mounted to the wall, or even without feet (if the wall construction permits that).
- ISO baskets have many different accessories, dividers, label holders etc., that create order and save space in the cabinets.



THE STANDARD SELECTION OF M-A4 and M-A6 LOWER CABINETS



M-A4
M-A6



M-A4U
M-A6U



M-A4U
M-A6U



M-A4U-T



M-A6U-T



M-A4R
M-A6R



M-A4S
M-A6S



M-A4W
M-A6W

THE DIMENSIONS OF M-A4 ja M-A6 LOWER CABINETS

DESCRIPTION		Width mm.	Depth mm.	Height mm.
Cabinet without door	M-A4	455	670	900
Cabinet without door	M-A6	655	470	900
Cabinet with door	M-A4U	455	670	900
Cabinet with door	M-A6U	655	470	900
Cabinet with drawers	M-A4S	455	670	900
Cabinet with drawers	M-A6S	655	470	900
Cabinet with roller doors	M-A4R	455	670	900
Cabinet with roller doors	M-A6R	655	470	900
Pivot slide door	M-A4U-T	524	670	900
Pivot slide door	M-A6U-T	798	470	900
Waste cabinet	M-A4W	455	670	900
Waste cabinet	M-A6W	655	470	900

The product page displays the standard solution dimensions and finishing's of MeriantoMedical furniture.

It is possible to prepare custom solutions of these products adapted according to the wishes of the client. and to use different finishing materials that are suited to the client's project.

Ask the Merianto representative for more information.