

TALL MEDICINE CABINETS MK

Merianto Medical hospital furniture is based on an ISO modular system using 600 x 400 mm and 400 x 300 mm baskets with the cabinet dimensions taking into consideration the modular system dimensions. The tall **MK** cabinets are designed for baskets with a width of 600 mm and 400 mm. All products are lockable. The cabinet interior can be fitted as desired using ISO modular system baskets, shelves and drawer systems.



The medicine cabinets are made from quality melamine with either closed or open facade. Doors open to a 220° angle and drawers open 100%.

Facade options are:





Standard options include five different finishings:



- The cabinet interior can be fitted according to individual needs using ISO system baskets, shelves and drawers
- Baskets have a load factor up to 20 kg
- Drawers on ball-bearing runners withstand loads up to 50 kg
- All facade types are lockable. The locks can be placed in series so that they are compatible with cabinets within the same room, floor or other desired zone. The selection includes a mechanical furniture lock but electronic code locks or smart card locks are additional options
- Doors have silicone magnets which ensure soft closing.
- The cabinets have adjustable feet and a base.
- The cabinets can be ordered with angled tops to help reduce dust collection on the tops.
- The ISO baskets used in cabinets have many additional accessories, dividers, label holders etc. which help create order and save space.



TALL CABINET M-K4 DIMENSIONS
Cabinets are intended for 400 x 600 mm baskets

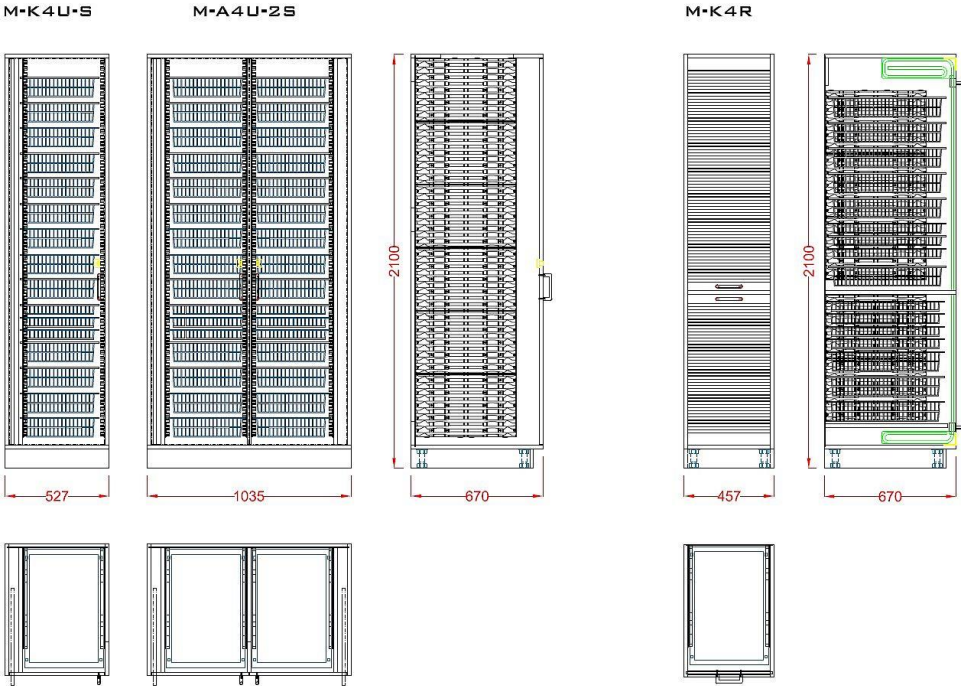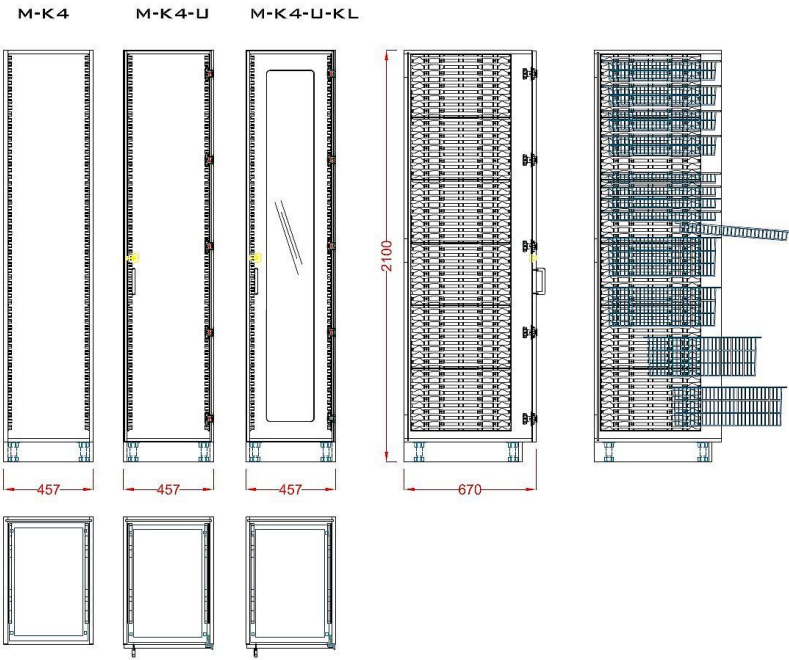

TALL CABINET M-K4 DIMENSIONS

Cabinets are intended for 400 x 600 mm baskets

