


MEDICINE CABINET WITH REFRIGERATOR MLK-65F

The MLK-65F medicine cabinet, based on the Merianto ISO module system, has been developed taking into consideration the needs of medical employees for a universal medicine cabinet. The lockable medicine cabinet has two parts and contains a separate lockable metal safe. The lower part of the medicine cabinet contains a medical refrigerator Liebherr LKUv 1613, which can be equipped with aluminium or plastic drawer sets that run on softly closing rails.



The medicine cabinet is produced from quality melamine. The selection for the facade includes a standard door (left/right), as well as a space-saving roller door. The door opens to 220°. The load capacity of shelves, drawers and baskets is 20 kg. There are many different ways of assembling the cabinet, as the cabinet's interior components – side panels, baskets, drawers, and shelves – can be assembled to specific requirements.

Standard options include five different finishings:

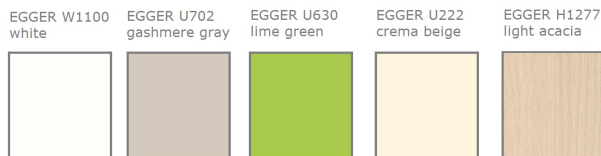

It is also possible to select from among tens of different colours and finishes from the catalogues of melamine producers, the availability of which must be verified at the time of ordering.

The standard solution of the MLK-65F medicine cabinet includes:

- 18 mm quality melamine shell and doors. The selection of materials also includes an antibacterial surface finishes.
- Pull-out auxiliary surface on ball runners, soft closing and lockable into the open position.
- The upper part of the cabinet has four adjustable glass shelves that can be replaced with ISO baskets if required.
- The upper part of the cabinet has a lockable metal cabinet, white RAL9010.
- The upper part of the cabinet has sensor-controlled LED lighting.
- The interior surface of the door of the upper part has Plexiglas height adjustable pockets, with dividers.
- The lower part of the cabinet contains a Liebherr LKUv 1613 medical refrigerator, into which it is possible to install aluminium or plastic drawer sets on soft closing rails.
- Locks on all doors. The locks can be serialized as desired so that they are compatible with other cabinets in the same room, floor or similar area. The base selection includes a mechanical furniture lock, but an electronic code lock or chip card lock can also be selected.
- The silicon magnets on the doors ensure a secure and soft closing of the doors.
- Strong metal foot frame with adjustable foot ends, colour white RAL9010.
- Handles are 128 mm long and have an antibacterial surface finish.



MEDICINE CABINET WITH REFRIGERATOR MLK-65F

Aluminium or plastic drawer sets on soft closing rails

